

ESD01-ERGONOMIC-OFFICE-CHAIR



ASSEMBLY INSTRUCTIONS:

A: Locate gas lift with plastic cover into five star base/castors.

B: Locate seat assembly onto gas lift
i.e. top of gas lift into circular hole in centre of under-seat mechanism.

C: Locate back assembly into the aperture at the rear of the seat and push firmly into place.

Please take care when lifting the chair as it is heavy when assembled and may need two people.



OPERATING INSTRUCTIONS:

1: Seat Height Adjustment: Raise lever (1) to raise or lower height of seat.

2: Back Angle Adjustment: Raise lever (2) to set independent back angle, push down to lock into desired position.

3: Seat Tilt: (if applicable) Raise lever (3) to alter seat tilt, push down to lock into desired position.

4: Seat Slide: (if applicable) Raise lever (4) to alter seat depth by sliding body forward, push down to lock into desired position.

5: Inflatable Lumbar: (If applicable) The hand pump (5) at the rear of the seat will inflate the lumbar when squeezed. Depressing the valve will deflate the lumbar.

6: Back Height Adjustment: Loosen rear hand-wheel (6) to raise backrest manually to desired position. Tighten the hand-wheel to lock into desired position.